PHILIPS

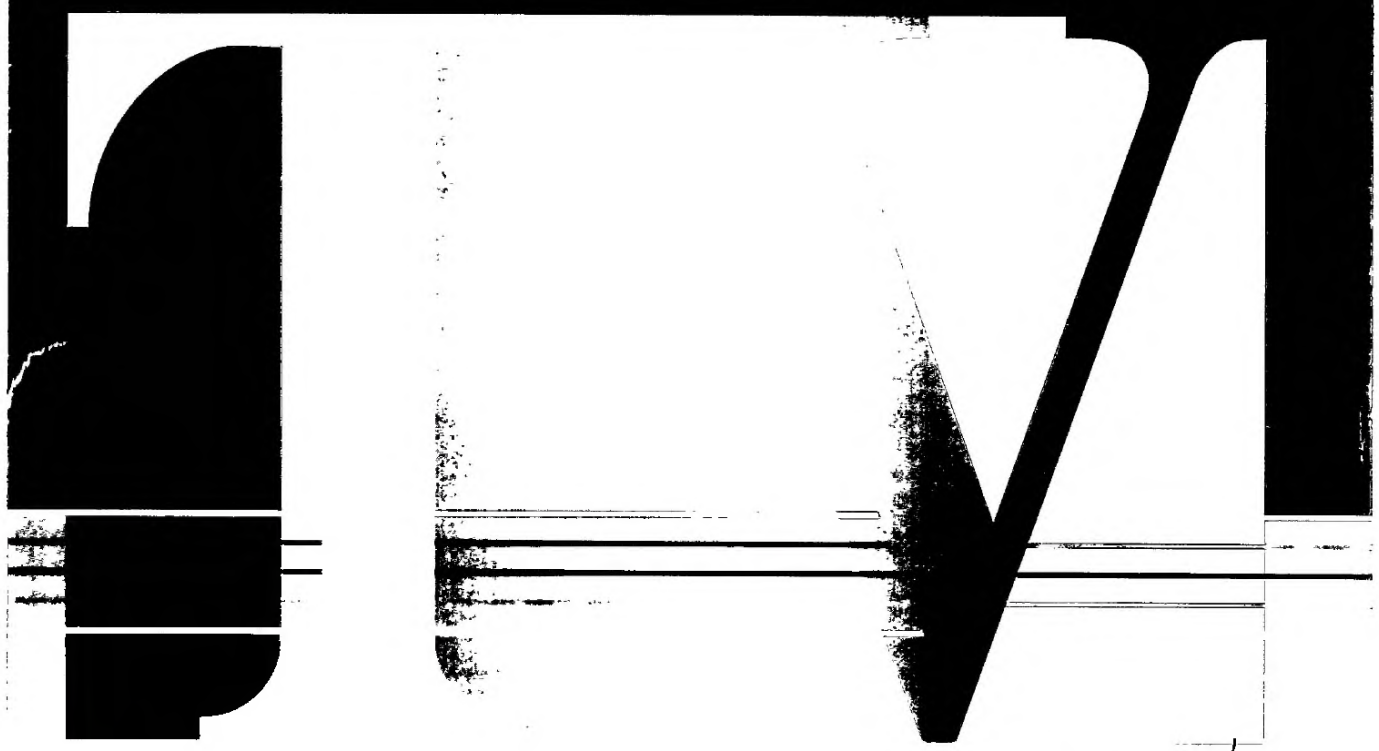

2IPT 136 A/01
135 A

PHILIPS

Downloaded from www.Manualslib.com manuals search engine

Information for users in the UK

Positioning the TV

For the best results, choose a position where light does not fall directly on the screen, and at some distance away from radiators or other sources of heat. Leave a space of at least 5 cm all around the TV for ventilation, making sure that curtains, cupboards etc. cannot obstruct the air flow through the ventilation apertures. The TV is intended for use in a domestic environment only and should never be operated or stored in excessively hot or humid atmospheres.

Tips

Please take note of the section 'Tips' at the end of the English section in this booklet.

Interference
The Department of Trade and Industry operates a Radio Investigation Service to help TV licence holders improve reception of BBC and IBA programmes where these are being spoilt by interference. If your dealer cannot help, ask at a main Post office for the booklet 'How to Improve Television and Radio Reception'.

Mains connection

Before connecting the TV to the mains, check that the mains supply voltage corresponds to the voltage printed on the type plate on the rear panel of the TV. If the mains voltage is different, consult your dealer.

Important
This apparatus is fitted with an approved moulded 13 Amp plug. To change a fuse on this type of plug proceed as follows :
1 - Remove fuse cover and fuse.
2 - Fix new fuse which should be a BS 1362, 5A, A.S.T.A. or BSI approved type.
3 - Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5A. If a plug without e fuse is used, the fuse at the distribution board should not be greater than 5A.

Note : The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

How to connect a plug
The wires in the mains lead are coloured in accordance with the following code :
BLUE - "NEUTRAL" ("N")
BROWN - "LIVE" ("L")

1 - The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
2 - The BROWN wire must be connected to the terminal which is marked with the letter "L", or coloured RED.
3 - Do not connect either wires to the earth terminal in the plug which is marked with the letter "E" or with the safety earth symbol or coloured green or green-and-yellow.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead- not simply over the two wires.

Connecting the aerial
The aerial should be connected to the socket marked ⊣⊢ at the back of the set. An inferior aerial is likely to result in a poor, perheps unstable picture with ghost images and lack of contrast. Make-shift loft or set-top aerials are often inadequate. Your dealer will know from experience the most suitable type for your locality. Should you wish to use the set in conjunction with other equipment, which connects to the aerial socket such as TV games or a video camera it is recommended that these be connected via a combiner unit to avoid repeated connection and disconnection of the aerial plug.

Loop aerial (if provided)
The loop aerial packed with the set will give satisfactory reception under good signal conditions. Insert the aerial in the slot provided on the back of the TV. Once fixed, the aerial will remain fixed. The aerial plug should now be inserted in the aerial socket.

Downloaded from www.Manualslib.com manuals search engine

Installation

ENGLISH

Follow the instructions very closely and step by step.
- ∘ This circle in front of a sentence indicates that you have to do something.
- ▷ This arrow in front of a sentence indicates the result of what you have done.

Text in Italic indicates help information.

Piece the TV on e solid base.
Leave at least 5 cm around each side of the TV for ventilation.
To prevent any faults and unsafe situations, do not place any objects on top of the sets.

The TV can only operate at a mains voltage of 220/240 V~, 50 Hz; consult your dealer if the mains supply is different.

- ∘ Connect the TV tightly to the mains supply socket.
- ∘ Connect the aerial (indoor or outdoor) plug to the ⊓ socket on the back of the TV.

Make sure that the connection facilities to any TV installed in your house are in good condition. Only use good quality aerial connectors and cables.
The aerial plugs should be tightly connected.

Small screen TV's (14"/34 cm. and 15"/36 cm. TV's) are equipped with a high performance indoor aerial, nevertheless in some circumstances (specific ragions or if surrounded by high buildings) reception problems could occur. Further improvement of reception could be obtained by:
- Rotating or varying the angle of the aerial.
- Using other aerial executions.
- Connecting your TV to an outdoor aerial.

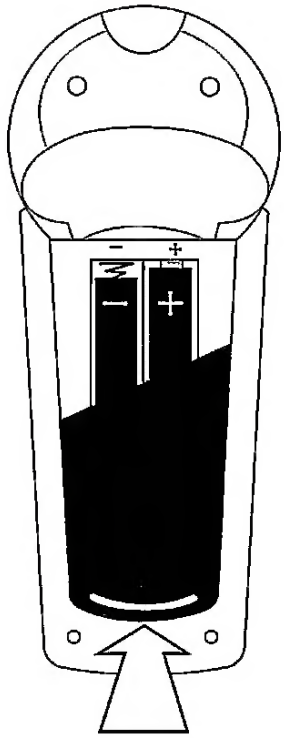

Remote control

- ∘ Remove the battery cover on the back of the remote control.
- ∘ Insert the batteries, as indicated on the remote control.
- ∘ Replace the battery cover.

The batteries supplied with the remote control of your TV do not contain the heavy metals mercury and cadmium. In many countries flat batteries may not be disposed of with your household waste.
Please ensure thet betteries are disposed of in accordance with any local regulations.

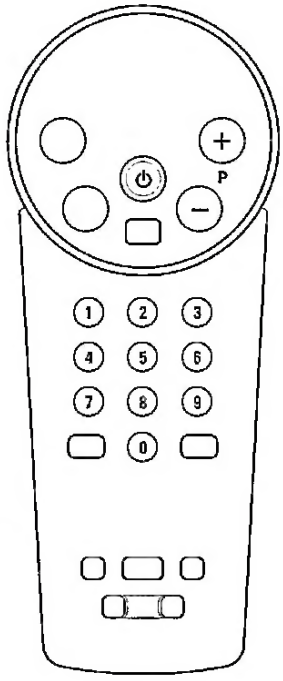

Switching TV on

- ∘ Press ⏻ on the front of the TV.
- ▷ The TV is switched on.
  Is the TV still switched off? Then the TV is on Stand-by.
- ∘ Press P — or + or a digit button on the remote control, or — or + on the TV, to switch on the TV.

Stand-by

- ∘ By pressing ⏻ on the remota control you can temporarily switch the TV off.
- ∘ Press P — or + or a digit button on the remote control, or — or + on the TV, to switch on the TV again.

Automatic switch off

If after a period of 15 minutes no aerial signal is received, the TV automatically switches to Stend-by.

Televisions consume energy in the stand-by mode. Energy consumption contributes to air and water pollution. We advice you to switch off your TV overnight instead of leaving it on stand-by. You save energy and the picture tube is demagnetised which supports good picture quality.

Downloaded from www.Manualslib.com manuals search engine

2 Storing TV channels

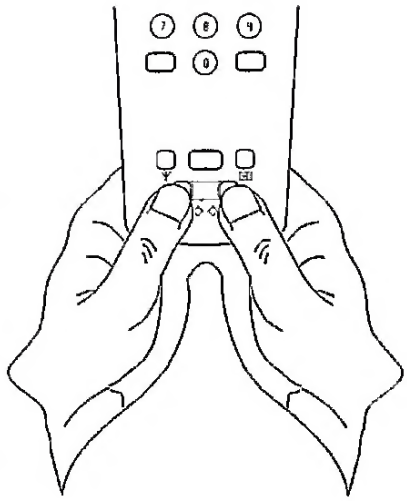

59 TV channels (1 to 59) can be stored on program numbers.
Write down the TV channels and the assigned program numbers while storing.

Important
You cannot store TV channels on program number 0.
Program number 0 is reserved to select electronic equipment connected via euroconnector (scart). See "Peripheral connections" on page 5.

Follow carefully steps **a, b, c, d, e.**

a.

- Press simultaneously the two ◇◇ buttons.
- ▷ The current program number and the TV-system are displayed on the screen.

b.

Not all countries broadcast TV programmes in the same way. We speak of different TV systems.You can select a different TV-system for each separate program number. You can select among the following TV-systems:

Region	TV-system	Used in
EUROPE	PAL BG - SECAM BG	West European countries except France, except United Kingdom and Ireland.
FRANCE	SECAM L L'	France.
UK	PAL I	United Kingdom and Ireland.

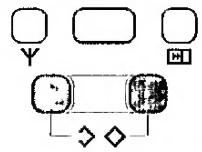

- Press Y one or more times to select the required TV-system.

c.

- Press ⏭ to start the search.
- ▷ The TV automatically searches until e TV chennel is found.
- If you want to continue searching for a specific TV channel then press ⏭ again.

d.

- Press P — or + or one or two digit buttons to select the program number (1 to 59) where you want to store the TV channel.
- ▷ The selected program number is displayed on the screen.

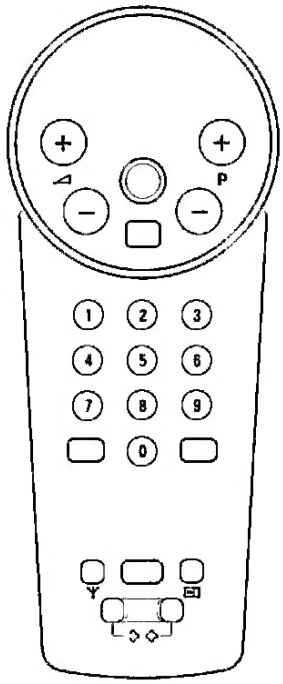

The sound-volume of some TV channels can be somewhat higher or lower than normal. If neccessery, you cen adjust the sound-volume for this specific TV channel to normal sound-volume, by pressing ◿ — or +.

e.

- Press simultaneously the two ◇◇ buttons to store this selection.

Repeat steps **a, b, c, d, e,** until all the TV channels you require heve been stored on program numbers.

Storing TV channels can be stopped by pressing simultaneously the two ◇◇ buttons.

Downloaded from www.Manualslib.com manuals search engine

ENGLISH

Auto Programming

Tha Auto Programming function can be used to find and store all available channels quickly. Channels are stored on program numbers in the same sequence as they are found. After Auto Programming is started, the TV starts seerching for e channel.
If a channel is found, it will be automatically stored on program number 1. Searching will start again automatically. If another channel is found, it will be stored on program 2, etc.
Your TV can receive different TV systems. With Auto Programming the TV searches automatically through all TV systems and stores all TV channels available. The TV systems are automatically salactad as in tha following saquanca and channels in those TV systems are searched for automatically:

1 - TV systam FRANCE (SECAM L L')
2 - TV system EUROPE (PAL/SECAM BG)
3 - TV system UK (PAL I)

At the end of the Auto Programming cycle the TV switches to program 1.

- Press simultaneously the two ◇◇ buttons longer than 4 seconds to start the Auto Progremming.

The Auto programming is stoppad by pressing simultaneously the two ◇◇ buttons.

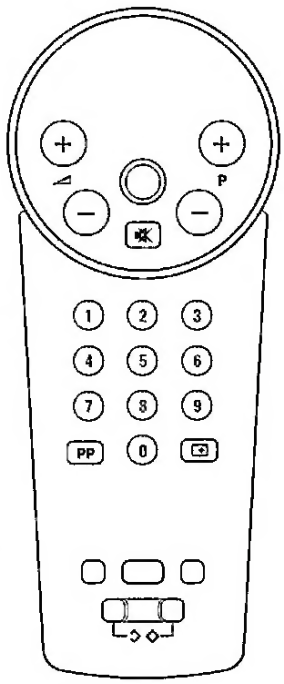

Operation

On Screen Display

The On Screen Display information allows you to see the program number on which a TV channel is stored, the timer status and a moving bar if the volume is adjusted.

- Press ⊡ to display information on the screen.
- Press ⊡ again to switch off information.

Selecting TV channels

- Press P — or + or prass one or two digit buttons on the remote control, or press — or + on the TV.
  To select a program number from 0 to 9 press one digit button. To select a program number from 10 to 59 you must press two digit buttons in less than 4 seconds.

Volume control

- Press ◿ — or + on the remote control.
- Press 🔇 to switch off the sound.
- Press 🔇 again or ◿ + to switch on the sound.

Menu on screen

With the menu on the screen you can change and store the picture and sound settings. Also you can set the timer.

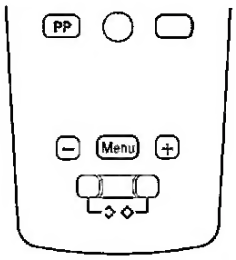

When you switch on your TV, the picture and sound settings have certain values. These values ere initially stored by the factory. Using the menu on screen you can change these values. Also if you store these values (by pressing simultaneously the two ◇◇ buttons after a change), the TV will switch on with your stored picture and sound values.
The stored picture and sound values can also be recalled by pressing **PP**.

- Prass MENU.
- ▷ **VOLUME** appears, adjust the volume by pressing — or +.
  If you want to store this setting press simultaneously the two ◇◇ buttons.

- Press MENU again.
- ▷ **BRIGHTNESS** appaars, adjust tha brightness by pressing — or +.
  If you want to store this setting press simultaneously the two ◇◇ buttons.

- Press MENU again.
- ▷ **CONTRAST** appears, adjust the contrast by pressing — or +.
  If you want to stora this satting prass simultaneously the two ◇◇ buttons.

- Press MENU again.

Downloaded from www.Manualslib.com manuals search engine

▹ **SHARPNESS** appears (this function is only present on certain TV models).
▹ Press + to obtain a very sharp image (HIGH) or press — to obtain a normal sharp image (LOW).
Under poor reception circumstances always select LOW.
If you want to store this setting press simultaneously the two ◇◇ buttons.
◦ Press MENU *again*.

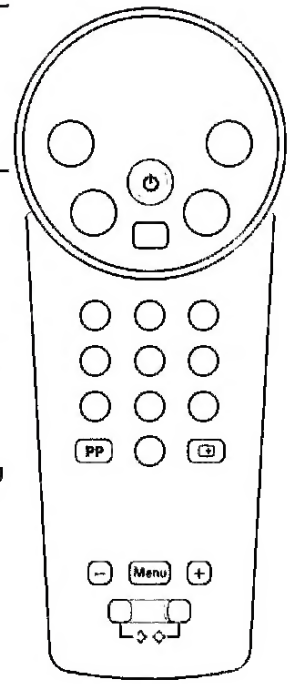

▹ **COLOUR** appears, adjust the colour by pressing — or +.
If you want to store this setting press simultaneously the two ◇◇ buttons.

◦ Press MENU again.
▹ **TIMER** appears.
Tha timer can be used to switch on or off the TV automatically after the time you want. You can set the time after which the TV switches on or off in steps of 10 minutas to a maximum of 24.00 hours.

Switching off automatically:
◦ Press — or + to select the time after which the TV should switch off. The count down starts immediately. You can see the remaining time by pressing ⊡ on the remote control.
During the final minute of the selected time period, the seconds remaining are automatically shown on the screen.
At the end of this time period the TV switches to stand-by mode.

Switching on automatically:
◦ Press — or + to select the time after which the TV should switch on. The count down starts immediately.
◦ Press ⏻ to switch the TV temporarily off.
▹ The TV will switch on after the time you have selected.

Note: If you switch on your TV again before the selected time has elapsed, the timer will be switched off automatically.

If you do not press any button within 3 hours after the TV has switched on eutometically, the TV will switch automatically to Stand-by again.

If you want to stop the TIMER press — or + until the selected period on the screen is 00.00.

◦ Press MENU.
▹ The menu disappeers.

If you want to leave the menu, for example after changing the contrast setting, you can either wait approximately 15 seconds or continue to press the MENU *button until the menu disappears from the screen.*

Peripheral connections

Aerial connection

You can connect your videorecorder or other equipment via the aerial connection on the back of the TV.
◦ Unplug the aerial plug from your TV and insert it into the aerial input ⊓ of your equipment.
◦ Connect another aerial plug to the output ⊡ of your equipmant, connect the other side to the aerial input ⊓ of your TV.
◦ Switch on your equipment.
◦ Check in the handbook of the particular equipment to see what the test signal looks like.
◦ Now, refer to the section **Storing TV chennels** to search for and store this signal on a programma number from 1 to 59 (you **cannot** store the signal on the program number 0). After that, you can receive signals from your equipment on this programme number.

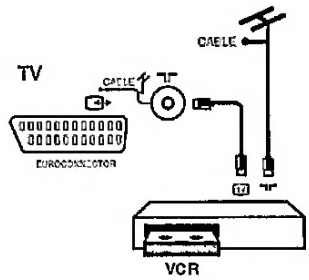

Downloaded from www.Manualslib.com manuals search engine

Euroconnection (scart) for e.g. videorecorder

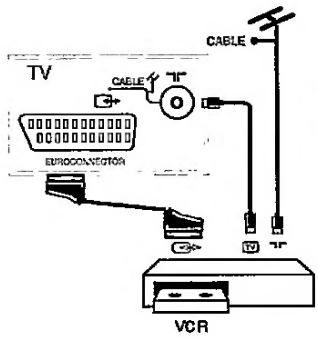

You can connect for example a videorecorder or satellite tuner to your TV via the euroconnector socket on the back of the TV. Ask your dealer for the appropriate cable.

- ◦ Connect the eurocable to the euroconnector socket of your videorecorder or electronic equipment and to the euroconnector socket of your TV.
- ◦ Connect an aerial cable to the output TV of your video recorder and to the aerial input of your TV.
- ◦ Normally if the electronic equipment is switched on, the picture will automatically appear on the TV screen.
  To select the electronic equipment manually, select program number 0.
  Program number 0 is reserved by the factory to select electronic equipment connected via eurocable.

Headphones

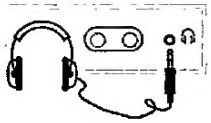

- ◦ Connect the headphones plug to the headphones socket on front of the TV.
- ▷ The internal loudspeakers of your TV are automatically switched off.

Audio/Video input

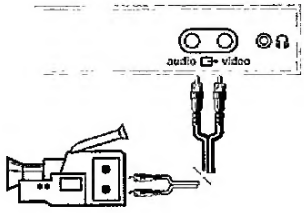

Audio/Video input is only present on certain TV models.

You can connect audio-video equipment, like a camcorder or game-computer, to the Audio/Video input on the front of your TV. Ask your dealer for an appropriate cable.

- ◦ Connect your equipment to the Audio/Video input of your TV.
- ◦ Press START or PLAY on your equipment.
- ◦ Select program number 0.
- ▷ The picture from your equipment appears on the screen.

NOTE: Do not use the Audio/Video input and the Euroconnection at the same time.

Tips

To clean the TV
Clean the TV using a slightly demp chamois leather.
Never use aggressive cleaning agents.

No picture from electronic equipment connected via euroconnector or via Audio/Video input:
Did you try selecting program 0?

No solution:
Switch your TV off and on again with the ⏻ button.
Never attempt to repair a defective TV set yourself.
Switch off the TV and call your dealer or TV-technician when nothing helps or when:

- A white horizontal stripe appears across the whole screen.
- The red lamp below the screen starts blinking when no buttons are pressed on the remote control.

Environmental information
Your TV contains material which can be recycled and reused. At end of life specialized companies can dismantle the discarded TV to concentrate the reusable materials and to minimize the ammount of materials to be disposed of.
Please find out about local regulations on disposal of your old TV set.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

OPMÆRKSOMHED - VIGTIGT : LYDSTYRKENIVEAU

DK

Dares TV har en speciel funktion, som tillader Dem at sætte forskellig lydstyrkeniveau for hvert programnummer (se også side 2 - indlæsning af TV kanaler).

Hvis De bemærker en voldsom forskel på lydstyrkeniveauet blandt programnumrene, kan De genjustere lydstyrkeniveauet for et bestemt programnummer på følgende måde:

- Tryk ⟩◇.
- ▹ Programnummeret blinker.
- Tryk ◿ — aller + for at justere lydstyrken til et normalt niveau.
- Tryk ⟩◇ for at indlæse det nye lydstyrkeniveau.

MERK - VIKTIG: LYDNIVÅ

N

TVan din har en spesialfunksjon som gjør det mulig å stille inn et forskjellig lydnivå for hvert programnummer (se også side 2 - Lagring av TV-kanaler).

Hvis du hørar an valdig ator forskjall på lydnivåana for da forskjellige programnummere, kan du igjen justere lydnivået for det enkelte programmet på følgende måte:

- Trykk på ⟩◇.
- ▹ Programnummeret begynner å blinke.
- Trykk på ◿ — eller + for å justere lyden til et normalt lydnivå.
- Trykk på ⟩◇ for å lagre det nye lydnivået.

OBSERVERA - VIKTIGT: LJUDVOLYMEN

S

Din TV har en speciell funktion som tillåter dig att lagra en individuell ljudnivå för varje programnummer (se även sida 2 - Lagring av TV-kanaler).

Om du hör en skillnad på ljudnivån mellan de olika programnumren, ställ in ljudnivån för ett speciellt programnummer på följande sätt:

- Tryck på ⟩◇.
- ▹ Programnumret blinkar.
- Tryck på ◿ — eller + för att ställa in volymen till en normal nivå.
- Tryck på ⟩◇ för att lagra den nya ljudnivån.

HUOMAA - TÄRKEÄÄ: ÄÄNENVOIMAKKUUS

SF

TV:ssä on erikoistoiminto, jonka avulla voit tallentaa kuilekin ohjelmanumerolle eri äänenvoimakkuuden (ks. myös sivulla 2 - TV-kanavien tallennus muistiin).

Joa äänenvoimakkuus on hyvin erilainen ohjelmanumeroiden välillä, säädä tietyn ohjelman äänenvoimakkuuden taso seuraavasti.

- Paina näppäintä ⟩◇.
- ▹ Ohjalmanumaro alkaa vilkkua.
- Säädä äänenvoimakkuus normaalille tasolle painikkeella ◿ — tai +.
- Tallenna äänenvoimakkuuden uusi taso muistiin painikkeella ⟩◇ .

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

ATTENTION - IMPORTANT : VOLUME LEVEL

GB

Your TV hes a special function that allows you to set a different volume level for each program number (sea also page 2 - Storing TV channels).

If you hear a strong difference of the volume level among program numbers, re-adjust the volume level for a specific program number in the following way.

- Press ❯◇.
- ▹ The program numbar atarts blinking.
- Press ◿ — or + to adjust the volume to a normal voluma level.
- Press ❯◇ to store the new volume level.

ACHTUNG - WICHTIG: LAUTSTÄRKE

D

Ihr Fernsehgerät besitzt eine Spezialfunktion, mit der die gewünschte Lautstärka für jada einzelne Programmnummer gaspeichert werden kann (siehe auch Seite ... - Speichern dar Farnsahsender).

Falls die Lautstärke spezifischer Programmnummern zu laut sein sollte, können Sie sie folgendermaßen einzaln regulieren:

- ❯◇drückan.
- ▹ Die Programmnummer blinkt.
- ◿ — oder + drücken, um eine normala Lautstärke einzustellen.
- ❯◇ drücken, um die normale Lautstärke zu speichern.

ATTENTION - IMPORTANT: NIVEAU DE VOLUME

F

Votre téléviseur a une fonction spéciale qui vous permet de mémoriser un nivaau de volume différent pour chaque numéro de programme (voir aussi page 2 - Mémorisation des programmes TV)

Si vous remarquez une différence excessive de niveau de volume entre numéros de programmes, procédez à un nouveau réglage du niveau de volume pour chaqua numéro de programme spécifique, de la façon suivante:

- Appuyez sur ❯◇.
- ▹ Le numéro de programme clignote.
- Appuyaz sur ◿ — ou+ pour régler le volume à un niveau normal.
- Appuyer sur ❯◇ pour mémoriser le nouvaau niveau de volume.

ATTENTIE - BELANGRIJK: GELUIDSNIVEAU

NL

Uw TV bazit aan speciale functie waarmee u een verschillend geluidsniveau voor ieder programmanummer kunt installan (zia ook pag.2 - Vastleggen van TV-kanalen).

Wanneer ar een groot verschil in geluidssterkte is tussen de programmanummers, dan kunt u het galuidsniveau voor elk specifiek programmanummer op de volgende wijze opnieuw instellen:

- Druk op ❯◇.
- ▹ Het programmanummer knippert.
- Druk op ◿ — of + om het geluid op normale sterkte in te stellen.
- Druk op ❯◇ om het nieuwe geluidsniveau vast te leggen.

ATTENZIONE - IMPORTANTE : LIVELLO DEL VOLUME

I

Il vostro TV ha una funzione speciale che vi permette di memorizzara un differente livello di volume per ogni numero di programma (consultate anche pg.2 - Memorizzare i canali TV).

Se notate una differenza nel livello di voluma tra numeri di programma troppo forte, reimpostate il livello di volume per ogni specifico numero di programma nal seguente modo:

- Premete ❯◇.
- ▹ Il numero di programma lampeggia.
- Premeta ◿ — o + per impostare il volume ad un livello normale.
- Premete ❯◇ per mamorizzare il nuovo livello del volume.

Downloaded from www.Manualslib.com manuals search engine

ATENCION - IMPORTANTE: NIVEL DEL VOLUMEN

E

Su televisor tiene una función especial que le permite memorizar un nivel diferente de volumen para cada número de programa (consulte también pág. 2 - memorizar los canales de televisión).

Si Ud. nota una difarencia en el nivel de volumen, entre los números de programa, demasiado fuerte, vuelva a astablecer al nivel de volumen para cada específico número de programa de la manera siguiente:

- Pulse ⟩◇.
- ▹ El número de programa parpadea.
- Pulse ◿ — o + para establecer el volumen a un nivel normal.
- Pulse ⟩◇ para memorizar el nuevo nivel de volumen.

ATENÇÃO - IMPORTANTE: NÍVEL DO VOLUME

P

O Seu TV tem uma função especial que permite memorizar um nível de volume diferente para cada número da programa (Verifique também na pág.2 - Memorização dos canais TV).

Se percebe uma diferença muito forte do nível do volume entre os números de programa, regule o nível do volume para cada específico número de programa na seguinte forma:

- Carregue ⟩◇.
- ▹ O número de programa lampeja.
- Carregue ◿ — ou + para regular o volume num nível normal.
- Carregue ⟩◇ para memorizar o novo nível do volume.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

PHILIPS
220-240V~ 50Hz 55W
UVSH

FABRIQUE EN FRANCE

S ANUBIS.A AC

MODEL : 21PT136A/01

8670-000-00563 01 0774 00

PROD. NO : QG 129501 120774

Imp en France SIPP

RC 3119 105 2252.3

Downloaded from www.Manualslib.com manuals search engine